



ISDB

*ISO-DAM 8A and BRIDGE8*

## **INSTRUCTION MANUAL**

Serial No. \_\_\_\_\_

030912

[www.wpiinc.com](http://www.wpiinc.com)

**World Precision Instruments**



## CONTENTS

|                                     |    |
|-------------------------------------|----|
| BRIDGE8 .....                       | 1  |
| Introduction .....                  | 1  |
| Unpacking.....                      | 2  |
| Instrument Description.....         | 2  |
| Operations.....                     | 2  |
| Positioning the Output to Zero..... | 3  |
| Bridge Switch .....                 | 3  |
| Transducer Calibration .....        | 4  |
| Example.....                        | 4  |
| General Amplification.....          | 4  |
| Specifications.....                 | 4  |
| ISO-DAM8A.....                      | 6  |
| Introduction .....                  | 7  |
| Notes and Warnings .....            | 7  |
| Unpacking.....                      | 7  |
| Instrument Description.....         | 8  |
| Noise and Interference.....         | 8  |
| Input Connection.....               | 8  |
| Input Cable .....                   | 9  |
| Source Select Switch.....           | 9  |
| Balance Adjustment .....            | 9  |
| Output .....                        | 9  |
| Filters .....                       | 10 |
| DC Offset.....                      | 10 |
| Single Channel Installation .....   | 10 |
| Operating Instructions.....         | 11 |
| Input Connections.....              | 11 |
| Output Connections .....            | 12 |
| Grounding.....                      | 12 |
| Shielding.....                      | 12 |
| Idle Settings.....                  | 12 |
| Control Adjustment .....            | 12 |
| Specifications.....                 | 13 |
| WARRANTY .....                      | 15 |
| Claims and Returns .....            | 15 |
| Repairs .....                       | 15 |

*Copyright © 2012 by World Precision Instruments, Inc. All rights reserved. No part of this publication may be reproduced or translated into any language, in any form, without prior written permission of World Precision Instruments, Inc.*



## BRIDGE8

The following symbols are used in this guide:



This symbol indicates a **CAUTION**. Cautions warn against actions that can cause damage to equipment. Please read these carefully.



This symbol indicates a **WARNING**. Warnings alert you to actions that can cause personal injury or pose a physical threat. Please read these carefully.

NOTES and TIPS contain helpful information.



Fig. 1—Up to eight rackmountable ISO-DAM8A and Bridge8 modules can be combined in a single chassis.

## Introduction

Any combination of **ISO-DAM8A** or **Bridge-8** modules may be combined in the same instrument main frame. Bridge-8 includes a differential amplifier featuring high input impedance, high common mode rejection of electrical interference and low current leakage input terminals. Force, pressure, temperature, displacement, light and other physical parameters are readily measured. Thermocouple wire transducers with cold junction references for a wide range of temperature monitoring are also available.

---

Each channel contains: a regulated DC power supply, 10V (+5 and –5V with respect to signal ground) to provide DC power to transducers and a precision differential amplifier with selectable voltage amplification and variable position adjustment control. Each module includes a low pass filter with conditioner for strain gauges and other transducers.

## Unpacking

Upon receipt of this instrument, make a thorough inspection of the contents and check for possible damage. Missing cartons or obvious damage to cartons should be noted on the delivery receipt before signing. Concealed damage should be reported at once to the carrier and an inspection requested. Please read the section entitled “Claims and Returns” on page 15 of this manual. Please contact WPI Customer Service if any parts are missing at 941.371.1003 or customerservice@wpiinc.com.

**Returns:** Do not return any goods to WPI without obtaining prior approval (RMA # required) and instructions from WPI’s Returns Department. Goods returned (unauthorized) by collect freight may be refused. If a return shipment is necessary, use the original container, if possible. If the original container is not available, use a suitable substitute that is rigid and of adequate size. Wrap the instrument in paper or plastic surrounded with at least 100mm (four inches) of shock absorbing material. For further details, please read the section entitled “Claims and Returns” on page 15 of this manual.

## Instrument Description

### Single Channel Installation

1. Remove two screws on the right and left sides of the instrument enclosure, respectively. Then remove eight screws on the bottom of the enclosure.
2. Slide the internal chassis out of the enclosure.
3. Remove the two screws holding the blank panel where the new channel is to be installed.
4. Plug the connector of this channel into the new module and then secure the channel in position with two screws.
5. Slide the chassis into the enclosure and reinstall all screws.

## Operations

Transducers are connected to Bridge-8 via the 8-pin transducer input connector on the front panel. Spare 8-pin DIN plugs are provided with each instrument to allow you to rewire the cables of other manufacturers’ transducers to connect to Bridge-8 modules (Fig. 2).

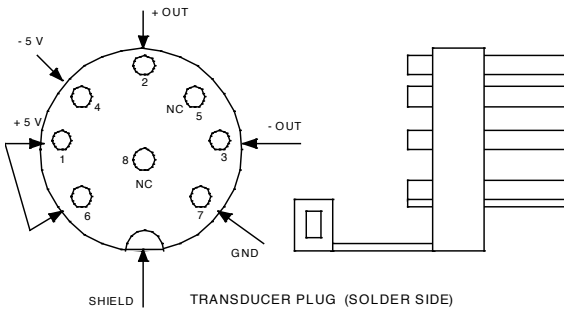


Fig. 2—Wiring schematic for the 8-pin DIN connection.

## Positioning the Output to Zero

Insert the transducer plug into the panel transducer input connector. Switch the Gain Select switch for the channel being used to x10 and set the Bridge switch to Differential. Turn on the Power switch at the top of the panel. One or both of the two red Offset Adjust indicator lamps will light if a transducer is plugged into the appropriate connector on the front panel. Output coaxial connectors for all channels are located on the rear panel of the instrument. If the  $-$  lamp is lit, the output voltage level is minus. If the  $+$  lamp is lit, the output voltage level is positive. To bring the output voltage level to nearly zero volts, adjust the Offset Adjust knob above the Gain switch so that both lamps are lit together. A significant increase in the sharpness or resolution of the zero adjustment may be achieved by increasing the gain to x100.

## Bridge Switch

Many transducers configured as Wheatstone bridges with four resistive elements will directly access the differential amplifier, as represented in Fig. 3. When the Bridge switch is in the Differential position, both inputs of the differential amplifier, inverting and non-inverting, are connected to the signal terminals of the transducer bridge. In single-ended operation, the inverting input of the differential amplifier is connected to a variable reference potential leaving the non-inverting input available to the signal source. In the Gnd (ground) position both the inverting and the non-inverting inputs are connected to ground.

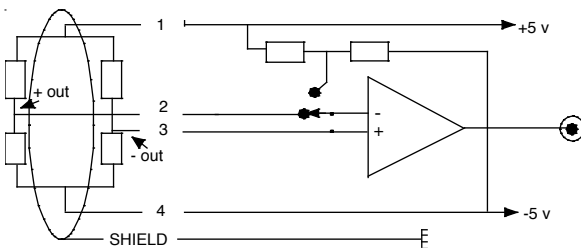


Fig. 3—This transducer is configured as a Wheatstone bridge with four resistive elements.

## Transducer Calibration

Bridge-8 provides fixed and accurate decade amplification steps. Of most interest to the user, however, may be the conversion factor from the physical variable—grams, mm of Hg, mm of displacement—to output voltage. Since the transducer’s conversion factor is often not exactly known and varies with the voltage applied to the sensor (10 volts from Bridge-8), it is therefore necessary for the user to calibrate the system using known forces, pressures or displacements to scale the output of Bridge-8 quantitatively with the original physical parameter being measured.

### Example

A typical pressure transducer is nominally rated at 5 microvolts out per volt of excitation per mm of Hg. To compute the approximate output from Bridge-8 for this transducer:

$$5 \mu\text{V/V} \cdot 10 \text{ V} \cdot \text{Amplification} = \text{Output } \mu\text{V per mm Hg}$$

Thus, if we had selected x100 Amplification, the output per mm Hg would be approximately 5 mV per mm Hg. Since the nominal rating of 5  $\mu\text{V}$  per volt is usually not exact, the user must, in the end, calibrate the transducer with a known hydrostatic pressure to obtain an accurate conversion factor. (WPI’s model **PM015 Pressure Monitor/Calibrator** is a suitable hydrostatic pressure calibration device.)

## General Amplification

For transducer types other than resistive bridges, such as active transistor circuits, magnetic, photocell or piezoelectric devices, the instrument’s differential amplifier may still be used for signal amplification in differential and single-ended modes. Note that pin 7, instrument ground, must be connected to the circuit ground of the input source to achieve effective amplification. Careful shielding of signal generating devices will result in lower noise “pickup” by the signal input wiring.

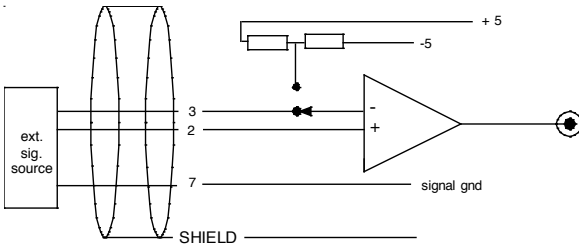


Fig. 4—

## Specifications

Voltage Amplification ..... x1, x10, x50, x100, x500, x1000 & adjustable  
Input Impedance .....  $> 10^{12}\Omega$   
Input Leakage Current .....  $< 0.1\text{pA}$  at 25°C, typ.

Voltage Offset Adjustment .....  $\pm 50\text{mV}$  (low offset range),  
 .....  $\pm 100\text{mV}$  (high offset range)  
 Amplifier Output Voltage .....  $\pm 5.0\text{V}$  (10mA, max.)  
 Transducer Excitation .....  $10\text{V}$  ( $\pm 5.0\text{V}$ ) (100mA, max.)  
 Low Pass Filter Band (kHz) ..... 0.03, 0.1, 0.3, 1, 5, 10, and "wide band"  
 Enclosure Dimensions ..... 7 x 17 x 9.2" (18 x 43 x 23cm)

**WORLD PRECISION INSTRUMENTS, INC.**

175 Sarasota Center Boulevard  
 Sarasota, FL 34240-9258 USA  
 Telephone: (941) 371-1003 Fax: (941) 377-5428  
 e-mail wpi@wpiinc.com

**DECLARATION OF CONFORMITY**

We: World Precision Instruments, Inc.  
 175 Sarasota Center Boulevard  
 Sarasota FL 34240-9258  
 USA

as the manufacturers of the apparatus listed, declare under sole responsibility that the product(s):

**Title: ISODAM8-x**  
 (covers models: ISODAM8-1 to ISODAM8-8 and Bridge 8. Also active head stage.  
 models: EXCELP and EXCELPM)

 
to which this declaration relates are in conformity with the following standards or other normative documents:

**Safety:** EN 61010-1:1993 (IEC 1010-1:1990)  
**EMC:** EN 50081-1:1992  
 EN 50082-1:1992

and therefore conform(s) with the protection requirements of Council Directive 89/336/EEC relating to electromagnetic compatibility and Council Directive 73/23/EEC relating to safety requirements.

Issued on: 18<sup>th</sup> February 2000

  
 Dr. Mark P. Broderick  
 President and COO  
 World Precision Instruments, Inc.  
 175 Sarasota Center Boulevard  
 Sarasota, FL 34240-9258 USA

  
 Mr. Glen Carquist  
 Production Manager  
 World Precision Instruments, Inc.  
 175 Sarasota Center Boulevard  
 Sarasota, FL 34240-9258 USA

---

## ISO-DAM8A

The following symbols are used in this guide:



This symbol indicates a CAUTION. Cautions warn against actions that can cause damage to equipment. Please read these carefully.



This symbol indicates a WARNING. Warnings alert you to actions that can cause personal injury or pose a physical threat. Please read these carefully.

NOTES and TIPS contain helpful information.

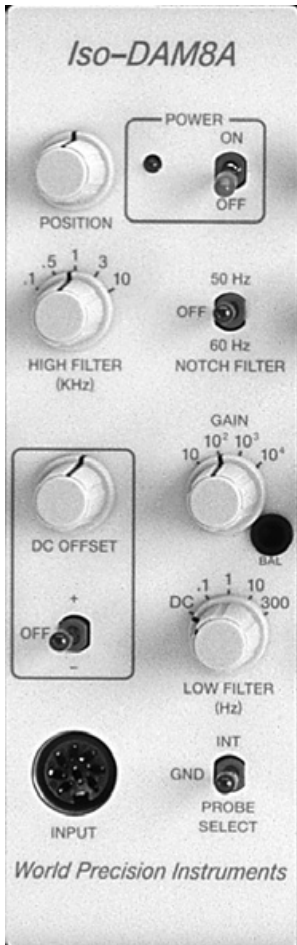


Fig. 1—Up to eight rackmountable ISO-DAM8A and Bridge8 modules can be combined in a single chassis.

## Introduction

The Iso-DAM8A is a modular bioamplifier designed for use with the Iso-DAM8 chassis, which can accommodate up to 8 modules. The Iso-DAM8A input stage is differential and is isolated from the AC power system. For example, there is no electrical connection to the AC power circuit ground. Isolated pre-amplification has important advantages over non-isolated amplifiers:

- There is no significant current can flow from the preamplifier input terminals to ground. Therefore, input connectors are intrinsically safe and cannot cause electrical shock at the site of measurement.
- Problems caused by “ground loops” are eliminated.

Electrodes or other signal sources may be connected directly to the Iso-DAM8A input connector, or an optional active headstage (WPI Part #74040) may be used. The headstage connects to the Iso-DAM8A through a 5-foot cable. It contains a high impedance differential amplifier in a small metal housing. Electrodes may be connected directly to the headstage, which can be positioned at the measurement site, minimizing electrical noise pickup and stray capacitance.

The Iso-DAM8A module contains an input DC offset adjustment, switch-selectable gain, switch-selectable high pass and low pass filters, a line frequency “notch filter” (which can be set to 50 or 60 Hz), and an output DC position adjustment.

The Iso-DAM8 chassis can be ordered for either 110-120VAC or 220-240VAC operation. The chassis can accommodate up to eight Iso-DAM8A bioamplifiers. A separate BNC connector is provided for the output of each channel, and all channel outputs are available at a common DB-25 connector.

## Notes and Warnings

---



**CAUTION:** The inputs to the Iso-DAM8A and the headstage can be damaged by electrostatic discharge. We recommend that you momentarily touch the Iso-DAM8A chassis or any grounded metal object before connecting wire or electrodes to the inputs.

---

## Unpacking

Upon receipt of this instrument, make a thorough inspection of the contents and check for possible damage. Missing cartons or obvious damage to cartons should be noted on the delivery receipt before signing. Concealed damage should be reported at once to the carrier and an inspection requested. Please read the section entitled “Claims and Returns” on page 15 of this manual. Please contact WPI Customer Service if any parts are missing at 941.371.1003 or [customerservice@wpiinc.com](mailto:customerservice@wpiinc.com).

**Returns:** Do not return any goods to WPI without obtaining prior approval (RMA # required) and instructions from WPI's Returns Department. Goods returned (unauthorized) by collect freight may be refused. If a return shipment is necessary, use the original container, if possible. If the original container is not available, use a

suitable substitute that is rigid and of adequate size. Wrap the instrument in paper or plastic surrounded with at least 100mm (four inches) of shock absorbing material. For further details, please read the section entitled “Claims and Returns” on page 15 of this manual.


## Instrument Description

### Noise and Interference

Electrical noise and interference originating from the current and voltage in the power mains and room lighting power is a primary source of concern for low level bioelectric recording. Every high amplification preamplifier is subject to this handicap, particularly when using microelectrodes. We recommend that all input leads be shielded and the preparation connected to earth (ground). Often, it will be necessary to enclose the preparation and electrode lead wires in a Faraday cage or shield to reduce mains induction to sufficiently low levels. It may be beneficial to extinguish overhead fluorescent lighting, as well. *Use of the optional headstage preamplifier can vastly improve frequency response and reduce noise pickup when high-impedance electrodes are used!*

### Input Connection

The input connector of the Iso-DAM8A module is a 8-pin DIN connector. The pin designations are shown in **Fig. 2** and the function of each pin is shown in the following table.

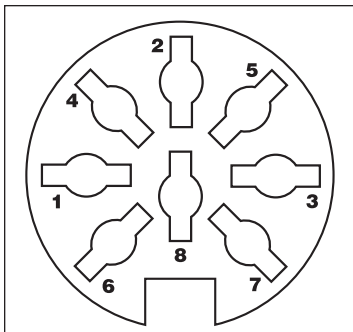

| PIN | FUNCTION                                |
|-----|---|
| 1   | Output from remote headstage.           |
| 2** | Isolated Ground                         |
| 3   | Reference Connection (See instructions) |
| 4   | Direct Input (+)                        |
| 5   | Direct Input (-)                        |
| 6*  | Headstage Power (+10VDC)                |
| 7*  | Headstage Power (-10VDC)                |
| 8   | No connection                           |

Fig. 2—Iso-DAM8A input connections are labeled.

\*Reserved for headstage use only. Do not use to power other devices.

\*\*Must be used to reference + input and - input.

## Input Cable

For convenience of connection to signal sources, each Iso-DAM8A module is supplied with a 5-foot length of shielded input cable. One end is terminated in a DIN plug which mates with the module. The other end has unterminated tinned leads. The wires are color-coded as shown below:

|       |                  |
|-------|------------------|
| Red   | + Input          |
| Black | - Input          |
| White | Isolated Ground" |

## Source Select Switch


The Source Select Switch sets the unit to operate either in the Internal Amplifier (direct input mode) or the External Probe mode. When set to the Internal Amplifier (INT), electrodes or other signal sources are connected directly to the INPUT connector. When set to the PROBE position, the unit works with the optional headstage. A center GND position disconnects all inputs to permit you to establish a DC baseline with the POSITION control. Note that in this position, the DC OFFSET and BAL (balance) adjustments have no effect.

## Balance Adjustment

The DC balance potentiometer let you adjust the Gain switch position stability. This potentiometer is accessible through a small screwdriver hole on the front panel. To adjust the DC balance, connect the "+" and "-" inputs of the input connector, or the headstage, if used, to Isolated Ground. Set the GAIN switch to 10. Using an oscilloscope or recorder connected to the Output connector, adjust the POSITION control so that the output trace on the recorder or oscilloscope is near the zero volt level. Rotate the GAIN selector switch from x10 to x10000. If the baseline moves, readjust the DC Balance potentiometer at the x10000 setting with a small screwdriver until the baseline returns its prior setting. The baseline should not deflect appreciably when the GAIN switch is reduced to lower values. The baseline should remain essentially stable (with input grounded) as the Gain switch is rotated.

## Output

The maximum signal output from any preamplifier channel is  $\pm 10V$ . All preamplifier channels have individual coaxial (BNC) connectors on the rear panel of the instrument. Channel numbers start with #1 on the left hand side (front view). Channel outputs are also available on a 25-pin connector for use with data acquisition systems.

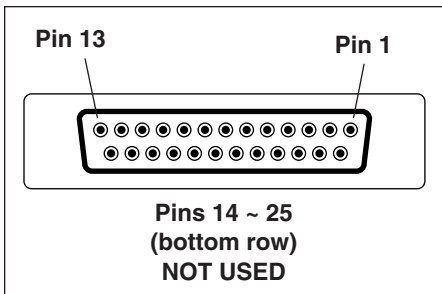

| PIN | FUNCTION  | PIN | FUNCTION  |
|-----|-----------|-----|-----------|
| 1   | Channel 1 | 8   | Channel 8 |
| 2   | Channel 2 | 9   | Ground    |
| 3   | Channel 3 | 10  | Ground    |
| 4   | Channel 4 | 11  | Ground    |
| 5   | Channel 5 | 12  | Ground    |
| 6   | Channel 6 | 13  | Ground    |
| 7   | Channel 7 |     |           |

Fig. 3—The 25-pin connector is used with data acquisition systems.

## Filters

Iso-DAM8A provides selected filtering at both the high and low ends of its frequency spectrum. The Low Filter settings are DC, 0.1, 1, 10 and 300Hz. The High Filter settings are 100, 500Hz, 1kHz, 3kHz, and 10kHz. Typical settings recommended for ECG and EEG would be Low Filter at 0.1Hz and the High Filter at 0.1kHz (100Hz).

## DC Offset

When operating the Iso-DAM8A as a DC amplifier, you may require a DC offset potential to compensate any existing DC voltage from the recording site. The DC Offset knob can provide 0 to >100mV DC of either polarity to reduce (null) the net input signal to zero volts. This becomes increasingly necessary if high gains are to be used with DC amplification. The toggle switch below the DC Offset knob selects the polarity of the offset voltage. If offset adjustment is not required, the toggle switch is kept in the Off position.

## Single Channel Installation

1. Remove two screws on the right and left sides of the instrument enclosure, respectively. Then remove eight screws on the bottom of the enclosure.
2. Slide the internal chassis out of the enclosure.
3. Remove the two screws holding the blank panel where the new channel is to be installed.
4. Plug the connector of this channel into the new module, and secure the channel in position with two screws.
5. Slide the chassis into the enclosure and reinstall all the screws.

## Operating Instructions

The connection to and from the amplifier and the settings of the controls will vary greatly from one application to another. The following guidelines may be helpful in establishing initial operating conditions.

### Input Connections



**CAUTION:** The inputs to the Iso-DAM8A and the headstage can be damaged by electrostatic discharge. We recommend that you momentarily touch the Iso-DAM8A chassis or any grounded metal object before connecting wire or electrodes to the inputs.

It is very important to minimize input lead length, and use of shielded cable is recommended for any leads over 2 or 3 inches (except grounding leads). Both the inverting and non-inverting inputs must be connected. A “floating” (non-connected) input will cause amplifier saturation.

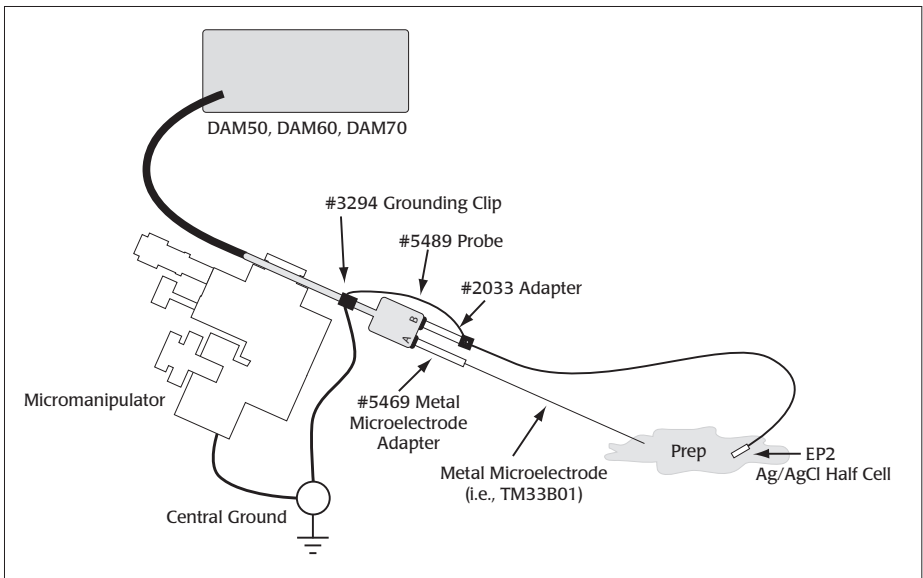


Fig. 4—A typical single-ended configuration is shown here.

The Iso-DAM8A inputs can be connected in either differential or single-ended modes. Differential connection can reduce noise pickup, and is usually preferable to single-ended. **Fig. 4** shows a typical single-ended configuration. The optional remote headstage is shown in these examples.

The two inputs on the headstage are electrically identical, except that positive-going signals applied to the RED non-inverting input produce a positive-going output from

---

the Iso-DAM8A, whereas a positive-going signal applied to the BLACK inverting input produces a negative-going output. The same holds true for the non-inverting “+” input and inverting “-” input on the INPUT connector. Reversing the connections from that shown simply results in an inverted signal.

## Output Connections

The output from each Iso-DAM8A module is available on the rear panel from a standard BNC connector or all channels are available at the 25-pin connector. See Fig. 3 for pin designations. The Iso-DAM8A output is suitable for application to any recording or data acquisition device.

## Grounding

Proper grounding is critical to successful biological signal monitoring. The optimum grounding configuration is the “single-point ground,” in which each component of a monitoring setup is connected to a single point which is connected to earth or mains ground. This grounding configuration is used in **Fig. 3** and **Fig. 4**.

## Shielding

The isolation feature of the Iso-DAM8A minimizes, but cannot eliminate, noise pickup from electric distribution lines, fluorescent lights, computers, motors, radio frequency transmitters, microwave ovens, etc. Use of shielded wires for input connection is necessary if the subject is located more than a few inches from the amplifier inputs. Even the use of shielded wires and proper grounding may be insufficient in a high electrical noise environment, particularly if high impedance electrodes are used, if the signal level is low (less than 100mV or so), or if high frequency response is required. In these situations, the use of a metal shield, known as a Faraday cage, which encloses the subject and the headstage may be necessary.

## Idle Settings

If you are not certain what settings are required, the following settings are a good starting point:

PROBE SELECT: GND  
LOW FILTER: DC  
DC OFFSET: OFF  
GAIN: 10  
HIGH FILTER: 10 KHZ  
NOTCH FILTER: OFF  
POSITION: Mid-range  
POWER: OFF

## Control Adjustment

After connecting inputs and outputs, the amplifier can be turned on. The POSITION control may be used to establish a baseline setting on the recording device. It is

normal to set this control so that the recording device indicates zero when the PROBE SELECT is in the GND position. The PROBE SELECT switch should be set appropriately for the setup.

- If the headstage is used, set the switch to PROBE.
- If direct connection is made to the Iso-DAM8A input, set the switch to INT.

The GAIN control should be set so that the desired signal produces a significant (>30% of full scale or so) on the recording device. If the recording device has a gain or sensitivity control, it is usually preferable to set the recording device to a low gain and the Iso-DAM8A to a high gain.

The HIGH and LOW filters should be used to reject noise outside the signal frequency range. If the signal is transient in nature and DC response is not required, the LOW filter should be set to the highest setting that does not distort the signal. The HIGH filter should be set to the lowest setting that does not distort the signal.

If line noise is a problem, the NOTCH FILTER may be set to 50 or 60Hz, as appropriate for the power system. Use of the notch filter can severely distort some signals.

If a large DC offset is present in the setup, the DC OFFSET control can be used to cancel it. The setting of this control can be quite sensitive, especially at high gain settings.

## Specifications

This unit conforms to the following specifications:

|   |   |
|---|---|
| Voltage Gain.....                       | x10, x100, x1000, x10,000   |
| Input Impedance to Gnd, each input..... | > 10 <sup>12</sup> Ω DC, 5 picofarads (typical)                             |
| Input R, Between Inputs.....            | > 10 <sup>12</sup> Ω DC, 3 picofarads (typical)                             |
| Amp Noise, Input Shorted.....           | < 0.2μV rms (1-100Hz),<br>< 1μV rms (1-10kHz)                               |
| Bandwidth.....                          | DC to 10kHz   |
| High Filter (Low Pass).....             | 0.1, 0.5, 1, 3, 10kHz   |
| Low Filter (High Pass).....             | 0.1, 1, 10, 300Hz   |
| Input Offset Voltage Adjust.....        | ± 1VDC  |
| Common Mode Rejection.....              | > 100dB @ 50/60Hz with <10Ω source<br>70dB typical with balanced 1MΩ source |
| Notch Filter Settings.....              | 50Hz, 60Hz, Off   |
| Line Noise Rejection.....               | >40dB   |
| Output Voltage Swing.....               | ±10V Maximum  |
| Output Resistance.....                  | 200Ω  |
| Output Position Adjustment.....         | ±1VDC   |
| Power Source.....                       | Power Adapter 110-120V/60Hz or 220-240/50Hz                                 |
| Enclosure Dimensions.....               | 6.8 x 17 x 11.2" (17 x 43 x 28cm)   |
| Shipping Weight.....                    | 10–21 lb. (4.5–9.5kg)   |



**WORLD PRECISION INSTRUMENTS, INC.**

175 Sarasota Center Boulevard  
Sarasota, FL 34240-9258 USA  
Telephone: (941) 371-1003 Fax: (941) 377-5428  
e-mail wpi@wpiinc.com

**DECLARATION OF CONFORMITY**

We: World Precision Instruments, Inc  
175 Sarasota Center Boulevard  
Sarasota FL 34240-9258  
U.S.A

as the manufacturers of the apparatus listed, declare under sole responsibility that the product(s):

 
Title: Modular Bio-Amplifier System  
Type: ISO-DAM8A  
Model Number: ISO-DAM8A-X  
Where X=1 to 8 modules

to which this declaration relates is/are in conformity with the following standards or other normative documents:

EN 50011:1991 Class B  
EN 50082-1:1992

and therefore conform(s) with the protection requirements of Council Directive 89/336/EEC relating to electromagnetic compatibility.

Issued on: February 12, 2001

  
Dr. Mark P. Brodenck  
President and COO  
World Precision Instruments, Inc.  
175 Sarasota Center Boulevard  
Sarasota, FL 34240-9258 USA

  
Mr. Glen Carlquist  
Production Manager  
World Precision Instruments, Inc.  
175 Sarasota Center Boulevard  
Sarasota, FL 34240-9258 USA

## **WARRANTY**

WPI (World Precision Instruments, Inc.) warrants to the original purchaser that this equipment, including its components and parts, shall be free from defects in material and workmanship for a period of one year\* from the date of receipt. WPI's obligation under this warranty shall be limited to repair or replacement, at WPI's option, of the equipment or defective components or parts upon receipt thereof f.o.b. WPI, Sarasota, Florida U.S.A. Return of a repaired instrument shall be f.o.b. Sarasota.

The above warranty is contingent upon normal usage and does not cover products which have been modified without WPI's approval or which have been subjected to unusual physical or electrical stress or on which the original identification marks have been removed or altered. The above warranty will not apply if adjustment, repair or parts replacement is required because of accident, neglect, misuse, failure of electric power, air conditioning, humidity control, or causes other than normal and ordinary usage.

To the extent that any of its equipment is furnished by a manufacturer other than WPI, the foregoing warranty shall be applicable only to the extent of the warranty furnished by such other manufacturer. This warranty will not apply to appearance terms, such as knobs, handles, dials or the like.

WPI makes no warranty of any kind, express or implied or statutory, including without limitation any warranties of merchantability and/or fitness for a particular purpose. WPI shall not be liable for any damages, whether direct, indirect, special or consequential arising from a failure of this product to operate in the manner desired by the user. WPI shall not be liable for any damage to data or property that may be caused directly or indirectly by use of this product.

## **Claims and Returns**

Inspect all shipments upon receipt. Missing cartons or obvious damage to cartons should be noted on the delivery receipt before signing. Concealed loss or damage should be reported at once to the carrier and an inspection requested. All claims for shortage or damage must be made within ten (10) days after receipt of shipment. Claims for lost shipments must be made within thirty (30) days of receipt of invoice or other notification of shipment. Please save damaged or pilfered cartons until claim is settled. In some instances, photographic documentation may be required. Some items are time-sensitive; WPI assumes no extended warranty or any liability for use beyond the date specified on the container

Do not return any goods to us without obtaining prior approval and instructions from our Returns Department. Goods returned (unauthorized) by collect freight may be refused. Goods accepted for restocking will be exchanged or credited to your WPI account. Goods returned which were ordered by customers in error are subject to a 25% restocking charge. Equipment which was built as a special order cannot be returned.

## **Repairs**

Contact our Customer Service Department for assistance in the repair of apparatus. Do not return goods until instructions have been received. Returned items must be securely packed to prevent further damage in transit. The Customer is responsible for paying shipping expenses, including adequate insurance on all items returned for repairs. Identification of the item(s) by model number, name, as well as complete description of the difficulties experienced should be written on the repair purchase order and on a tag attached to the item.

*\* Electrodes, batteries and other consumable parts are warranted for 30 days only from the date on which the customer receives these items.*



## ***World Precision Instruments, Inc.***

### **USA**

International Trade Center, 175 Sarasota Center Blvd., Sarasota FL 34240-9258  
Tel: 941-371-1003 • Fax: 941-377-5428 • E-mail: sales@wpiinc.com

### **UK**

1 Hunting Gate, Hitchin, Hertfordshire SG4 0TJ  
Tel: 44 (0)1462 424700 • Fax: 44 (0)1462 424701 • E-mail: wpiuk@wpi-europe.com

### **Germany**

Zossener Str. 55, 10961 Berlin  
Tel: 030-6188845 • Fax: 030-6188670 • E-mail: wpide@wpi-europe.com

### **China & Hong Kong**

WPI Shanghai Trading Co., Ltd.  
Rm 20a, No8 Dong Fang Rd., Lu Jia Zui Financial District, Shanghai PRC  
Tel: +86 688 85517 • E-mail: chinasales@china.wpiinc.com

### **Internet**

www.wpiinc.com • store.wpiinc.com • www.wpichemistry.com  
www.wpi-europe.com • www.wpiinc.cn